



# Model 214

## Announcer's Console



### Configuration Guide

This Configuration Guide is applicable for the following serial numbers:  
M214-00151 and later  
with application firmware 1.3 and later and  
Dante firmware 2.0.0 (Ultimo 3.10.1.12) and later



#### Model 214 Announcer's Console Configuration Settings

For full documentation go to [www.studio-tech.com](http://www.studio-tech.com)

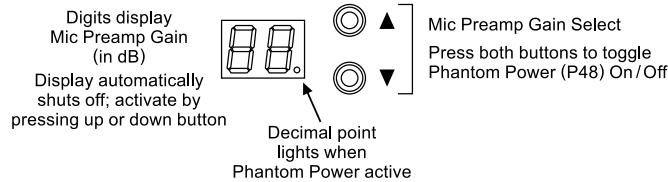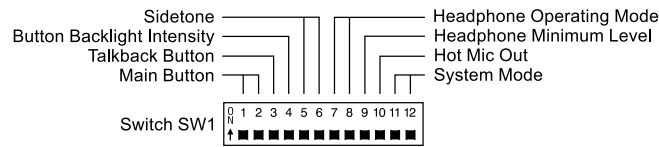

#### Main Button (1, 2)

- ▼▼ Push to Mute
- ▲▼ Push to Talk
- ▼▲ Latching
- ▲▲ Hybrid

#### Talkback Button (3)

- ▼ Push to Talk
- ▲ Hybrid

#### Button Backlight Intensity (4)

- ▼ Low
- ▲ High

#### Sidetone (5, 6)

- ▼▼ Off
- ▲▼ Main Button
- ▼▲ Talkback Button
- ▲▲ Main & Talkback Buttons

#### Headphone Operating Mode (7, 8)\*

- |    |                       |                       |                       |
|----|-----------------------|-----------------------|-----------------------|
|    | C1                    | C2                    | C3                    |
|    |                       |                       |                       |
| ▼▼ | C1: Ch 1 → L/Ch 2 → R | C2: Ch 3 → L/Ch 4 → R | C3: Sidetone          |
| ▲▼ | C1: Ch 1 → L/Ch 2 → R | C2: L/R Balance       | C3: Sidetone          |
| ▼▲ | C1: Ch 1 → L & R      | C2: Ch 2 → L & R      | C3: Ch 3 → L/Ch 4 → R |
| ▲▲ | C1: Ch 1 → L          | C2: Ch 2 → R          | C3: Ch 3 → L/Ch 4 → R |

#### Headphone Minimum Level (9)

- ▼ -40 dB
- ▲ Full Mute

#### Hot Mic Out (10)


- ▼ Disable
- ▲ Enable

#### System Mode (11, 12)


- ▼▼ On-Air
- ▲▼ Production with Dim
- ▼▲ Production
- ▲▲ Reserved

\* Applies to units with application firmware 1.3 and later.


## Model 214 Bottom Panel

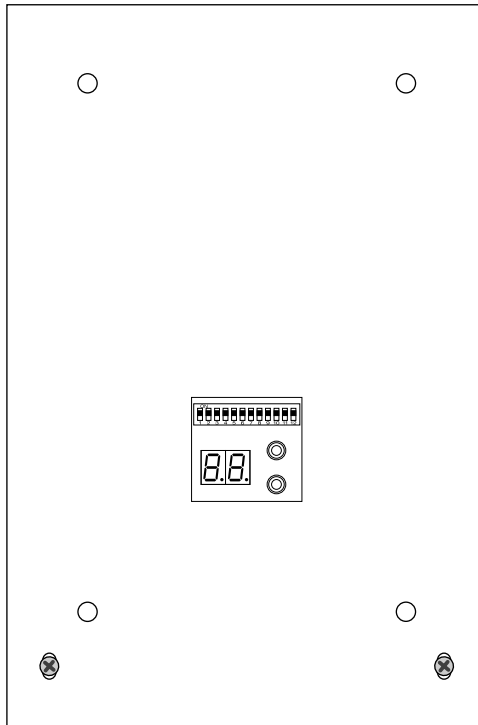


### SW1-1 and SW1-2 – Main Button

 


Push to mute (“cough”)

 

Push to talk

 


Latching (alternate action)

 

Hybrid (press and hold to enable, tap to latch)


### SW1-5 and SW1-6 – Sidetone

 

Off (no sidetone)



 Main button controls sidetone




Talkback button controls sidetone




Main and talkback buttons control sidetone

### SW1-3 – Talkback Button

 


Push to talk

 


Hybrid (press and hold to enable, tap to latch)

### SW1-4 – Button Backlight Intensity

 

Low

 

High


### SW1-7 and SW1-8 – Headphone Operating Mode



 
C1: Ch 1 → L / Ch 2 → R  
C2: Ch 3 → L / Ch 4 → R  
C3: Sidetone



C1: Ch 1 → L / Ch 2 → R  
C2: L/R Balance  
C3: Sidetone




 C1: Ch 1 → L & R  
C2: Ch 2 → L & R  
C3: Ch 3 → L / Ch 4 → R




C1: Ch 1 → L  
C2: Ch 2 → R  
C3: Ch 3 → L / Ch 4 → R


## Model 214 Bottom Panel

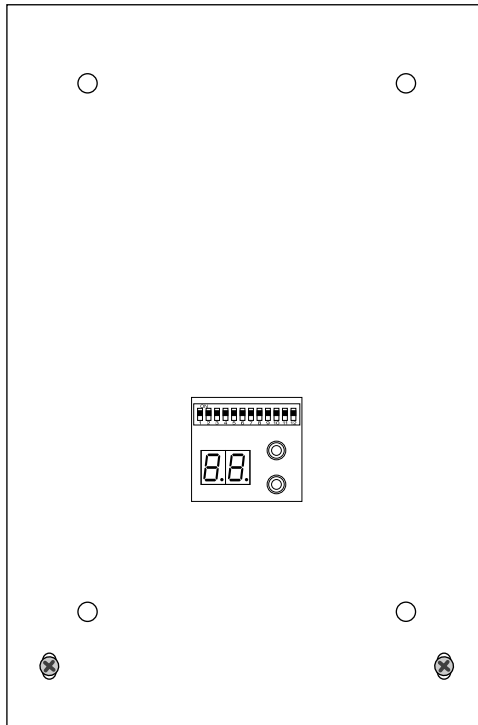

### SW1-9 – Headphone Minimum Level

 


–40 dB

 


Full mute

### SW1-10 – Hot Mic Out

 


Disable

 


Enable


### SW1-11 and SW1-12 – System Mode

 

 
On-Air (talkback status impacts main out status)



 Production with Dim (talkback status does not impact main out status; headphone out dims during talk)



 Production (talkback status does not impact main out status)



Reserved