



Model 380 On-Air Beltpack

Configuration Guide

 
 
 
 
This Configuration Guide is applicable for the following serial numbers: M380-01001 and later with application firmware 2.1 and later and Dante firmware 2.0 (Ultimo 3.10.1.12) and later






 
Accessing DIP Switches

The DIP switches are located on the back of the Model 380 under the belt clip. To gain access remove the belt clip's Phillips-head screw (6-32 thread pitch). Then rotate the belt clip to expose the switches. Replace the screw after configuration has been completed.


 
SW1 & SW2 – Mic Preamp Gain

	35 dB
	43 dB
	52 dB
	59 dB

 
 
SW3 & SW4 – Headphone Output Mode

	Level / Level Input 1 to left output; left phones potentiometer adjusts level. Input 2 to right output; right phones potentiometer adjusts level.
	Level / Balance Input 1 to left output, input 2 to right output. Left phones potentiometer adjusts level of both outputs; Right phones potentiometer adjusts L/R balance.
	Dual-Channel Monaural Input 1 to both left and right outputs; left phones potentiometer adjusts level. Input 2 to both left and right outputs; right phones potentiometer adjusts level.
	Single-Channel Monaural Input 1 to left output; left phones potentiometer adjusts level. Input 2 to left output; right phones potentiometer adjusts level. No signal to right output.

SW5 – Talkback Button Mode

	Momentary
	Latching

SW6 – Sidetone

	Off (no sidetone)
	On